

HP PAVILION CHARGER

Compatible with: (To find the right laptop Model by using" Ctrl+ F" and Search)

Part Number:

384020-001, 384021-001, ED495AA, 384020-002, HP-AP091F13P SELF, 391173-001, 409992-001
384020-003, 382021-002, PPP012L-S, PPP012S-S, PPP014L-S, PPP014H-S, PA-1900-08H2,
PA-1900-18H2, HP-AP091F13LF SE
ED495AA#ABA, 397823-001, 416421-001, 418873-001, 463955-001

Laptops:

HP Compaq 2510p Notebook PC
HP Compaq 2710p Notebook PC
HP Compaq 6510b Notebook PC
HP Compaq 6530b Notebook PC
HP Compaq 6710b Notebook PC
HP Compaq 6715b Notebook PC
HP Compaq 6715s Notebook PC
HP Compaq 6730b Notebook PC
HP Compaq 6735b Notebook PC
HP Compaq 6735s Notebook PC
HP Compaq 6910p Notebook PC
HP Compaq 8510p Notebook PC
HP Compaq 8510w Mobile Workstation
HP Compaq 8710p Notebook PC
HP Compaq 8710w Mobile Workstation
HP Compaq nc4400 Notebook PC
HP Compaq nc6400 Notebook PC
HP EliteBook 6930p Notebook PC
HP EliteBook 8530p Notebook PC
HP ProBook 4510s Notebook PC
HP ProBook 4515s Notebook PC
HP ProBook 4710s Notebook PC

HP HDX Home Notebook PCs
HP HDX X16-1000 Premium Notebook series
HP HDX X16-1100 Premium Notebook series
HP HDX X16-1200 Premium Notebook series

HP Home Notebook PCs
HP G60-100 Notebook series
HP G60-200 Notebook series
HP G70-100 Notebook sries
HP G70-200 Notebook series

Compaq Presario Home Notebook (Laptop) PCs

Compaq Presario CQ40 Notebook series

Compaq Presario CQ45 Notebook series

Compaq Presario CQ50-100 Notebook series

Compaq Presario CQ60-100 Notebook series

Compaq Presario CQ60-200 Notebook series

Compaq Presario CQ60-300 Notebook series

Compaq Presario CQ61-100 Notebook series

Compaq Presario CQ70-100 Notebook series

Compaq Presario CQ70-200 Notebook series

Compaq Presario CQ71-100 Notebook series

HP Pavilion Home Desktop PCs

HP Pavilion g3200 Desktop PC series

HP Pavilion Home Notebook PCs

HP Pavilion dv2-1000

HP Pavilion dv3500

HP Pavilion dv3600

HP Pavilion dv3-2000

HP Pavilion dv4-1200

HP Pavilion dv5-1000

HP Pavilion dv5-1100

HP Pavilion dv5-1200

HP Pavilion dv6-1000

HP Pavilion dv6-1100

HP Pavilion dv7-1000

HP Pavilion dv7-1100

HP Pavilion dv7-1200

HP Pavilion dv7-2000

HP Compaq Business Notebook NX8420 Series

HP Compaq Business Notebook NX9420 Series

HP COMPAQ PRESARIO CHARGER

Compatible with: (To find the right laptop Model by using" Ctrl+ F" and Search)

Laptops:

HP Compaq Business Notebook NC Series:

nc6400, nc2400, nc4400, nc6320

HP Compaq Business Notebook NW Series:

nw8440, nw9440

HP Compaq Business Notebook NX Series:

nx6310, nx6315, nx6320, nx6325, nx7300, nx7400, nx8420, nx9420

HP Compaq Tablet PC TC Series:

tc4400 (the models with 65W adapter)

HP Compaq Notebook PC:

Mini-2133, 2533t Mobile Thin Client, 510, 530,
2230s, 2510p, 2710p, 6510b, 6515b, 6530b, 6535b, 6710b, 6715b,
6720s, 6720t Mobile Thin Client, 6730b, 6730s, 6735b, 6735s,
6830s, 6910p, 8510p, 8510w Mobile Workstation, 8710p, 8710w Mobile Workstation

HP Compaq Presario Series:

A900, CQ40, CQ45, CQ50, CQ50-100, B1210

HP EliteBook Notebook PC Series:

2530p, 2730p, 6930p, 8530p, 8530w Mobile Workstation

HP Pavilion DV4-1000 Series:

DV4-1000, DV4T-1000, DV4Z-1000 CTO

HP Pavilion DV5-1000 Series:

DV5-1120, DV5-1120US, DV5-1124, DV5-1124CA, DV5t, DV5z

HP Pavilion DV7 Series:

DV7, DV7t, DV7z

HP Pavilion G5000, G6000, and G7000 Series

HP Compaq nc4400 Notebook PC Series

HP Compaq nc6320 Notebook PC Series

HP Compaq nx6320 Notebook PC Series

HP Compaq nx7300 Notebook PC Series

ACER ASPIRE CHARGER

Compatible with: (To find the right laptop Model by using" Ctrl+ F" and Search)

Part Number: LC.ADT01.006 , ADP-65DB (REV.B), PA-1700-02,
LC-T2801-006, LC.ADT01.001, AP.T3503.002, AP.06501.006

Laptops:

Acer Aspire 1300 Series

Acer Aspire 1350 Series

Acer Aspire 1360 Series

Acer Ferrari 3000 Series

Acer Ferrari 3200 Series

Acer Ferrari 4000 Series

Acer Ferrari 5000 Series

Aspire 2420 / 2920 / 2930 / 3050 / 3100 / 3620 / 3650 / 3660 / 3670 / 3680 / 4220 / 4230 / 4310 / 4320 / 4330 /
4520 / 4530 / 4710 / 4710Z / 4720 / 4730Z / 4920 / 4930 / 5050 / 5100 / 5230 / 5235 / 5310 / 5315 / 5330 / 5520 /
5530 / 5535 / 5570 / 5570Z / 5580 / 5710 / 5710Z / 5715Z / 5720 / 5730Z / 5735 / 5735Z / 5920G / 5930 / 6530 /
6920 / 7100 / 7230 / 7330 / 7530 / 7530G / 7730 / 7730Z / 9400 +

Extensa 4120 / 4220 / 4620 / 5220 / 5620 / 5630 / 7220 / 7620

Ferrari FR1000 / FR1100

TravelMate 2450 / 2460 / 2470 / 2480 / 3030 / 3040 / 3250 / 3260 / 3270 / 3300 / 4220 / 4310 / 4320 / 4330 /
4520 / 4720 / 4730 / 5100 / 5210 / 5220 / 5230 / 5310 / 5320 / 5510 / 5520 / 5530 / 5600 / 5710 / 5720 / 5730 /
6231 / 6291 / 6292 / 6492 / 6592 / 7230 / 7320 / 7530 / 7720 / 7730

Acer Aspire

Aspire 1200

Aspire 1410 (1414WLCi)

Aspire 1640 (1642WLMi)

Aspire 1650

Aspire 1680 (1681LCi, 1681WLCi, 1681WLMi, 1683WLMi, 1684WLMi, 1685WLMi)

Aspire 1690 (AS1690LCi, AS1690WLCi, AS1690WLMi, AS1691WLCi, AS1691WLMi, AS1692WLMi,
AS1694WLMi)

Aspire 2000, 2010, 2020

Aspire 3000 (3002LCi, 3002WLCi, 3002WLMi, 3003WCi, 3003WLCi)

Aspire 3030

Aspire 3500 (3502LCi, 3502NLCi, 3502WLCi, 3503LCi, 3503WLCi, ZL6)

Aspire 3600 (3603WXCi, 3603WXM, 3602NWXM, 3603WXCi 3603WXM, 3603NWXM 3603NWXM, 3603XCi,
3608NWXCi, 3608WXCi 3608WXM)

Aspire 3610

Aspire 5000 (5002LMi, 5002WLMi, 5004WLMi)

Aspire 9100

Acer Travelmate

TravelMate 2xx-Series:

200DX / 200T / 201 / 201T / 202 / 202T / 210 Series / 210 / 210T / 210TER / 210TXF / 211 / 211T / 212 / 212T / 212TE / 212TXV / 213 / 213T / 213TX / 213TXV / 220 / 222 / 223 / 225Series / 222X / 223X / 223XC / 223XV / 225X / 225XC / 225XV / 230 / 233 / 234 Series / 230XC / 230XV / 230XV-PRO / 233LC / 233X / 233XV / 233XVi / 234LCi / 260 / 261 Series / 261XC / 261XV Series / 260 / 261Series / 261X / 261XC / 261XV / 270 / 272 / 273 / 275 Series / 270XV / 272LC / 272X / 272XV / 272XVi / 273X / 273XV / 275LC / 280 / 281 / 283 Series / 281XC / 281XV / 283LC / 283LCi / 283XV / 283XVi / 290Series / 290LC / 290LCi / 290LMi / 290XCi / 290Xi / 290XMi / 290XVi / 291LCi / 291LCi-G / 291LMi / 291LMi-G / 291XCi / 291XCiH / 292LC / 292LCi / 292LM / 292LMi / 293LCi / 293LMi

TravelMate 3xx-Series:

310 / 311 / 312 / 313 / 314 Series / 310T / 311T / 312T / 313T / 314T / 320 Series / 330 / 332 / 333 Series / 330T / 332T / 333T / 340 / 341 / 342 / 343 Series / 340T / 341TV / 342T / 343TV / 345 / 347 Series / 345T / 347T Series / 350 / 351 / 352 / 353 / 354 Series / 350TE / 350TE-N / 351TE / 351TEV / 352TE / 353TE / 353TEV / 354TE / 354TEV / 360 / 361 / 364 Series / 361EVi / 364ECi Series / 365 Series / 370 Series / 371LCi / 371LMi / 371TCi / 371TCi XP / 371Ti / 371Tmi / 370 Series / 371LCi / 371LMi / 371TCi / 371TCi XP / 371Ti / 371Tmi

TravelMate 5xx-Series:

512DX / 512T / 512TE / 512T-64 / 513DX / 513T / 514T / 514TXV / 515TE / 516TE / 517TE TravelMate 53x-Series: 530LC / 530LCi / 530XC / 530XCi / 530XV / 530XVi / 531LC / 531LCi / 531XC / 531XCi / 531XV / 531XVi / 533LC / 533LCi / 533XC / 533XCi / 533XV / 533XVi / 534LC / 534LCi / 534TL / 534XC / 534XCi / 534XV / 535LC / 535LCi / 536LCi TravelMate 540 Series / 540LCi / 540LMi / 541LC / 541LCi / 541LCib / 541LMi / 541XCi / 541XV / 542LCi / 542LMi / 543LCi / 543LMi

TravelMate 6xx-Series:

600 / 602 / 603 / 604 Series / 610 / 611 / 612 / 613 / 614 Series / 610Txc / 610TXV / 610TXVi / 611Txc / 611TXCi / 611TXV / 612Txc / 612TXCi / 612TXV / 613Txc / 613TXV / 614TXVci / 620 / 621 / 623 Series / 621LV / 621XC / 621XV / 623LC / 623LCi / 630 / 632 / 633 Series / 630XV / 630XCi / 632Xci / 633LCi Series/ 650LC / 650XC / 650Xci / 653LC / 653LCi / 653XC / 653Xci / 653XV / 654LC / 654LCi / 654XC / 654Xci / 654XV / 655LCi/ 660LCi / 660LMi / 661LC / 661LCi / 661LM / 661LMi / 661XC / 661Xci / 661XVi / 662LC / 662LCi / 662LM / 662LMi / 662Xci / 663LCi / 663LM / 663LMi

TravelMate 7xx-Series:

720 / 722 / 723 Series / 720TX / 720TXV / 721TX / 722iTX / 722iTXV / 722TX / 723TX / 723TXV / 730 / 732 / 734 / 735 Series / 730TX / 730TXV / 732TLV / 732TX / 732TXV / 734TL / 734TXV / 735TLV / 736 / 737 / 738 / 739 Series / 736TL / 736TLV / 737TLV / 738TLV / 739GTLV / 739TLV / 740 / 741 / 744 Series / 740LVF / 741LVF / 744LCF

TravelMate 80x-Series:

800LC / 800LCi / 800LCib / 800LMi / 800LMib / 800XC / 800XCi / 801LC / 801LCi / 801LCib / 801LMi / 801LMib /
801XC / 801XCi / 801XVi / 802LCi / 802LCiB / 802LMi / 802LMib / 802XCi / 803LC / 803LCi / 803LCib / 803LM /
803LMi / 803LMib / 803XCi / 803XVi / 804LC / 804LCi / 804LCib / 804LM / 804LMi / 804LMib

TravelMate 2300 2301LC, 2301LCi, 2301WLCi, 2301XC, 2303LC, 2303LCi, 2303WLCi, 2304LCi, 2304WLCi,
ZL1

TravelMate 2310 2312LCi

TravelMate 2350 2400, 2410

TravelMate 3000 3002WTCi

TravelMate 3210 3213WXCi, 3213WXM

TravelMate 3220 3220WXCi 3220WXM, 3222WXCi, 3222WXM

TravelMate 3230

TravelMate 4000 4000LCi, 4000WLCi, 4001LCi, 4001WLCi, 4001WLMi, 4002WLMi)

TravelMate 4020, 4050 4052LCi

TravelMate 4060

TravelMate 4500 4501WLMi

TravelMate 4100 4100LCi, 4100LMi

TravelMate 4150

TravelMate 6000 6003LMi

TravelMate 8000 8002LCi, 8003LMi, 8006LMi

TravelMate 8100 8104WLMi, ZF1

DELL STUDIO CHARGER

Compatible with: (To find the right laptop Model by using" Ctrl+ F" and Search)

Part Number:

DELL PA-10 , 9T215 , 7W104 , F2663 , 2H098 , 09T215 , 07W104 , 0F 266 , 02H098 , 310-2862 , 310-3399 , 310-4804 , PA-1900-02D, C2894, 0DF266, 310-3149, 5U092, AD-90195D, PA-1900-01D3, DF266

Laptops:

DELL INSPIRON

1150, 1501, 1521, 1525, 1526, 1720, 1721, 6000, 6400, 8500, 8600, 9200, 9300, 9400, 300m, 500m, 510m, 600m, 630m, 640m, 700m, 710m, XPS M140, M1210 , M1530, E1405, E1505, E1705, 1420, 1520, 1521, 1525, 1526, 1535, 1720

DELL LATITUDE

D400, D410, D420, D430, D500, D505, D510, D520, D530, D531, D600, D610, D620, D630, D631, D800, D810, D820, D830, X300, 100L, 131L, XT E5400, E5500, E6400, ATG, E6500 and D-Series Docking Stations

DELL PRECISION

M20, M60, M65, M70, M170, M1210, M1530, M2300, M2400, M4300

DELL VOSTRO

1000, 1310, 1400, 1500, 1510, 1700, 1710

DELL XPS

M1210, M1330, M1530

DELL Studio

Studio 15 1525 1535 , Studio 17

SAMSUNG CHARGER

Compatible with: (To find the right laptop Model by using" Ctrl+ F" and Search)

Samsung A10, A10 DXT, A10 XTC

Samsung Aquila C

Samsung Aquila

Samsung Corona

Samsung GS6000, GT6000, GT6330, GT6330XT, GT6360, GT6360XT, GT6400, GT6400XV, GT7000, GT7450, GT7600, GT7700, GT7700XT, GT8000, GT8100, GT8100KXV, GT8600, GT8650, GT8650XT, GT8700, GT8700XT, GT8750, GT8750XT, GT8750XV, GT8800, GT8800DXV, GT8800XT, GT8800XV, GT8800XVD, GT8850XT, GT8850XTD, GT8900, GT8900DXV, GT8910, GT8910KXV, GT9000, GT9120

Samsung M40, M40 plus

Samsung P27, P28, P28G, P29, P30, P35, P40

Samsung Q1, Q10, Q20, Q25, Q30, Q30 plus, Q35, Q40, Q40 Pro U1400 , Q40 XIP 1400, Q45

Samsung R39, R39-DY04, R39-DY06, R40, R40 XIC 2050, R40 XIP 2050, R40 XIP 2055, R40 XIP 2250, R40 XIP 2255, R40 XIP 5500, R40 XIP 5510, R40-EL1, R40-K003, R40-K005, R40-K006, R40-K007, R40-K008, R40-K009, R40-K00A, R40-K00D, R40-K00E, R40-K00F, R40-T2300, R40-T2300 , R45, R45 Pro 1730 , R45 Pro C1600 , R45 Pro , R45 Pro T5500 , R45-1730 , R45-C1500, R45-K0, R45-K004, R45-K005, R45-K006, R45-K007, R45-K00D, R45-K02, R50, R50 WEH 750, R50 WVM 1730, R50 WVM 1730 II, R50 WVM 1730 III, R50 WVM 1860, R50 XEH 743, R50 XEH 745, R50 XIH 741, R50 XWM 740, R50 XWM 742, R50 XWM 750, R50-001, R50-2000, R50-CV04, R50-CV05, R50-CV06, R50-V01, R50-V02, R51, R55, R55 XEC 5500, R55 XEH 2300, R55-C002, R55-CV03, R55-CV05, R55-CV06, R55-T2300 , R55-T2300

Samsung Sens Pro

500, 505, 520, 521, 522, 523, 524, 525, 525, 525, 630, 680, 850

Samsung Sens

500, 630, 690, 700, 800, 810, 820, 830, 900, 950, V10

Samsung SN6000

Samsung V8095CX

Samsung VM6000, VM6300, VM6300CT, VM7000, VM7500CT, VM7550, VM7550CT, VM7600CT, VM7600XT, VM7650, VM7650CT, VM7650CXT, VM7650CXTD, VM7650XT, VM7700, VM7700XTD, VM8000, VM8080, VM8080CT, VM8080CXT, VM8090, VM8090CT, VM8090CXTD, VM8095, VM8100, VM8100CX, VM8100KXTD, VM8110XTC

Samsung X05, X05 Plus, X05 XTC 1400, X05 XTC 1400 II, X05 XTC 1400C, X05 XTM 1600, X05-000, X05-001, X05-0VU, X05-402, X05-FU2, X05-GKO, X05-L10, X05-W06, X06, X1, X11, X15

LENOVO IBM CHARGER

Compatible with: (To find the right laptop Model by using" Ctrl+ F" and Search)

Part Number:

92P1105, 92P1106, 92P1109, 92P1110, 92P1113, 92P1114, 92P1153 , 92P1155 , 92P1157 , 92P1159 ,
93P5026

Laptops:

IBM/Lenovo ThinkPad T60

IBM ThinkPad X60

IBM ThinkPad X60s

IBM ThinkPad Z60 Series:

ThinkPad Z60,

ThinkPad Z60m,

ThinkPad Z60t

IBM ThinkPad Z61 Series:

ThinkPad Z61e,

ThinkPad Z61t IBM

ThinkPad T60 Series:

ThinkPad T60, ThinkPad T60p

IBM / Lenovo ThinkPad R60, R60e

IBM / Lenovo ThinkPad R61, R61e, R61i

IBM / Lenovo ThinkPad R400, R500

IBM / Lenovo ThinkPad X200, X200s, X200 Tablet

IBM / Lenovo ThinkPad X300, X301

IBM / Lenovo ThinkPad SL300, SL400, SL500

IBM/Lenovo 3000 Series:

Lenovo 3000 C100,

Lenovo 3000 N100,

Lenovo 3000 V100

Lenovo V200 N200 C200

TOSHIBA SATELLITE CHARGER

Compatible with: (To find the right laptop Model by using" Ctrl+ F" and Search)

Part Number:

Liteon PA-1900-05, Liteon PA-1600-05, Liteon PA-1750-01, GATEWAY SA80T-3115, GATEWAY 6500097, GATEWAY 6500723, GATEWAY 6500714, GATEWAY ADP-90SB, TOSHIBA PA3165U-1ACA, TOSHIBA PA3097U-1ACA, TOSHIBA PA3032U-1ACA, TOSHIBA PA3395U-1BRS, TOSHIBA PA3421U-1BRS

Fit Model:

[Gateway]

- Gateway 3000 Series: 3000, 3018, 3018GZ, 3040, 3040GZ, 3500, 3520, 3520GZ, 3522, 3522GZ, 3525, 3525GB, 3545, 3545GZ, 3550, 3550GZ, 3550GH, 3610, 3610GZ
- Gateway 4000 Series: 4000, 4010, 4012, 4012GZ, 4014, 4014GB, 4016, 4024, 4024GZ, 4025, 4025GZ, 4026, 4026GZ, 4028, 4028GZ, 4028JP, 4030, 4030GH, 4030GZ, 4520, 4520GZ, 4525, 4525GZ, 4528, 4528MX, 4530, 4530GH, 4530GZ, 4532, 4534, 4535, 4535GZ, 4536GZ, 4538, 4538GZ, 4540, 4540GZ, 4541, 4541BZ, 4542, 4542GP, 4543, 4543BZ
- Gateway 6000 Series: 6000 , 6010 , 6010GZ , 6510 , 6510GZ , 6021 , 6021GH , 6021GZ , 6018 , 6018GH , 6018GZ , 6018GX , 6022 , 6022GZ , 6020 , 6020GZ , 6023 , 6023GP , 6530 , 6531 , 6531GZ , 6518 , 6518GZ , 6520 , 6520GZ , 6525 , 6525GP
- Gateway CX Series: CX200, CX200S, CX200X
- Gateway M Series: M210, M250, M250A, M250B, M250E, M250G, M250ES, M250GS, M255, M280, M285, M320, M325, M350CRV, M360, M460, M460S, M460X, M460XL, M500, M505, M505, M2, M520, M520S, M520X, M520XL, M675, M680
- Gateway MX Series: MX3000, MX3042, MX3044, MX3044h, MX3558, MX3558h, MX3560, MX3560h, MX3562, MX3563h, MX3563, MX3610, MX6000, MX6420, MX6421, MX6423, MX7300m
- Gateway ML3000 Series: ML3000, ML3704, ML3706
Gateway MT3000 Series: MT3000, MT3400, MT3418, MT3700, MT3705, MT3707
Gateway MT6700 Series: MT6700, MT6704, MT6704h, MT6705, MT6707
Gateway MT6800 Series: MT6800, MT6821, MT6828, MT6828h
Gateway NX Series: NX200, NX200S, NX200X, NX250X, NX850
Gateway NX100X
Gateway NX200 Series: NX200, NX200S, NX200X, NX210, NX250, NX250X, NX260, NX260X
- Gateway NX500 Series: NX500, NX500S, NX500X, NX510, NX510S, NX510X, NX550, NX550X, NX550XL, NX560, NX560X, NX560XL, NX570, NX570QS, NX570X, NX570XL
- Gateway S Series: S-7200, S-7200C, S-7200N, S-7500, S-7500N.
- Gateway Solo 1000 Series: 1200, 1400, 1450
- Gateway Solo 2000 Series: 2100, 2150, 2200, 2300, 2300LS, 2300XL, 2500, 2500LS, 2500SE, 2500XL, 2550
- Gateway Solo 3000 Series: 3100, 3150, 5100
- Gateway Solo 5000 Series: 5100XL, 5150LS, 5150SE, 5150XL, 5300, 5350
- Gateway Solo 9000 Series: 9100, 9100SE, 9100LS, 9100XL, 9150, 9300, 9300CX, 9500, 9550
- Gateway 450
- Gateway 600

[Hp/Compaq]

- Compaq eMachines notebook AC adapter for M6805, M6807, M6809, M6810, M6811, M6410, M6412 series
- Compaq Presario 1800 Series: 1800T-850, 1800T-800 , 1800T , 1800
- Compaq Presario 17XL Series: 17XL570, 17XL475 , 17XL465 , 17XL460 , 17XL375 , 17XL365 , 17XL362 , 17XL360 , 17XL275 , 17XL265
- Compaq Presario 1700 Series: 1720US, 1714EA, 1710SB, 1710LA, 1710, 1700XL573, 1700T, 1700
- Compaq Presario 1600 Series: 1694 , 1693 , 1692 , 1690 , 1688 , 1687 , 1685 , 1682 , 1681 , 1680 , 1675 , 1672 , 1670 , 1665 , 1655 , 1650 , 1640 , 1635 , 1630 , 1626 , 1625 , 1622 , 1621 , 1620 , 1615 , 1611 , 1610 , 1600XL145
- Compaq Presario 14XL Series: 14XL345 , 14XL340 , 14XL245 , 14XL240
- Compaq Presario 1400 Series: 1456 , 1400T
- Compaq Presario 12XL Series: 12XL510 , 12XL505 , 12XL500 , 12XL430 , 12XL427 , 12XL426 , 12XL420 , 12XL410 , 12XL405 , 12XL401 , 12XL400 , 12XL4 , 12XL327 , 12XL326 , 12XL325 , 12XL310 , 12XL300 , 12XL125 , 12XL115
- Compaq Presario 1200 Series: 1280, 1279 , 1278 , 1277 , 1275 , 1274 , 1273 , 1272 , 1270 , 1267 , 1266 , 1262 , 1260 , 1256 , 1255 , 1250 , 1247 , 1246 , 1245 , 1244 , 1242 , 1240 , 1237 , 1236 , 1235 , 1234 , 1232 , 1230 , 1221 , 1220 , 1216 , 1215 , 1214SR, 1214 , 1210 , 1207 , 1201Z, 1201AP
- Compaq Presario 1200XL Series: 1200XL526, 1200XL515 , 1200XL510 , 1200XL505 , 1200XL500 , 1200XL423 , 1200XL420 , 1200XL409 , 1200XL408 , 1200XL406 , 1200XL404 , 1200XL401 , 1200XL325 , 1200XL300 , 1200XL3 , 1200XL127 , 1200XL126 , 1200XL125 , 1200XL119 , 1200XL118 , 1200XL111 , 1200XL110 , 1200XL109 , 1200XL106 , 1200XL105 , 1200XL104 , 1200XL103 , 1200XL102 , 1200XL101 , 1200XL
- Compaq Presario 1000 Series: 1200US, 1200T , 1200 , 1090ES, 1090 , 1081 , 1080 , 1075 , 1070 , 1065 , 1060 , 1050 , 1040 , 1030 , 1020 , 1010 , 1000
- Compaq Evo N Series: N180 , N160 , N115 , N105
- Compaq 725CA
- Compaq Prosignia 150
- Compaq Presario 80XL550
- Compaq Presario 800
- Compaq Presario 800XL
- Compaq Presario 700 Series: 725US , 725 , 723RSH, 721CL , 715 , 711CL, 710 , 700 , 701 , 705US, 705 , 700Z, 700US
- Compaq Presario 2700 Series: 3000, 2800 , 2700T
- Compaq Presario 2100 Series: 2175EA , 2173EA , 2172EA , 2170US , 2169EA , 2167EA , 2166EA , 2165EA , 2164EA , 2163EA , 2162EA , 2161EA , 2160US , 2160EA , 2158EA , 2158AP , 2157AP , 2156EA , 2156AP , 2155US , 2155EA , 2155AP , 2154EA , 2154AP , 2153AP , 2152EA , 2151EA , 2151AD , 2150US , 2150AP , 2149EA , 2149AD , 2148EA , 2148AD , 2147EA , 2147AD , 2146EA , 2146AD , 2145US , 2145EA , 2145CA , 2145AP , 2145AD , 2144EA , 2144AD , 2143AP , 2143AD , 2142EA , 2141EA , 2141AD , 2141AC , 2140US , 2140CA , 2140AP , 2140AD , 2140AC , 2139AD , 2139AC , 2138EA , 2138AD , 2138AC , 2137EA , 2137AD , 2137AC , 2136RSH, 2136EA , 2136AD , 2136AC , 2135US , 2135EA , 2135CA , 2135AP , 2135AD , 2135AC , 2134EA , 2134AD , 2133EA , 2133AP , 2133AD , 2133AC , 2132RS , 2132AC , 2131EA , 2131AD , 2131AC , 2130EA , 2130AP , 2130AD , 2130AC , 2129EA , 2129AD , 2128EA , 2128AD , 2128AC , 2127EA , 2127AD , 2127AC , 2126EA , 2126AD , 2126AC , 2125EA , 2125AP , 2125AD , 2125AC , 2124AP , 2124AD , 2123AP ,

2123AD , 2122AD , 2120US , 2120LA , 2120EA , 2120AP , 2120AD , 2119EA , 2119AD , 2118EA , 2118AD , 2117EA , 2117AP , 2116AP , 2115EA , 2115AP , 2114EA , 2114AP , 2113AP , 2112EA , 2112AP , 2111EA , 2111AP , 2110US , 2110LA , 2110EA , 2110CA , 2110AP , 2109EA , 2108EA , 2107EA , 2107AP , 2106US , 2106EA , 2106AP , 2105US , 2105LA , 2105EA , 2105CA , 2105AP , 2104AP , 2103EA , 2103AP , 2102US , 2102EA , 2102AP , 2101US , 2101AP , 2100US , 2100LA , 2100CA , 2100AP

- Compaq Presario 18XL Series: 18XL590 , 18XL580 , 18XL390 , 18XL380 , 18XL280
- Compaq Presario 1800 Series: 1830 , 1827 , 1825 , 1810 , 1805 , 1800XL481 , 1800XL390 , 1800XL380 , 1800XL280 , 1800XL190 , 1800XL
- Compaq Evo N115 Series
- Compaq Evo N105 Series
- Hp Pavilion ZU Series: ZU1000 , ZU175
- Hp Pavilion ZT Series: ZT1290 , ZT1260 , ZT1250 , ZT1201 , ZT1195 , ZT1190 , ZT1185 , ZT1180 , ZT1175 , ZT1171 , ZT1170 , ZT1162 , ZT1161 , ZT1155 , ZT1152 , ZT1151 , ZT1150 , ZT1145 , ZT1141 , ZT1135 , ZT1131s , ZT1130 , ZT1125 , ZT1121s , ZT1114 , ZT1000
- Hp Pavilion ZE Series: ZE5490US , ZE5395US , ZE5279 , ZE4455EA , ZE4420CA , ZE4335US , ZE4325US , ZE4325CA , ZE4315US , ZE4315CA , ZE4307 , ZE4300 , ZE4240 , ZE4239 , ZE4236 , ZE4230 , ZE4229 , ZE4224 , ZE4219 , ZE4210 , ZE1110
- Hp Pavilion XZ Series: XZ355 , XZ295 , XZ275 , XZ185
- Hp Pavilion XT Series: XT595 , XT236 , XT155 , XT118 XT5477WM , XT537QV , XT4345QV
- Hp Pavilion XH Series: XH675 , XH555 , XH485 , XH455 , XH395 , XH365 , XH350 , XH260 , XH226 , XH176 , XH156
- Hp Pavilion XF145
- Hp Pavilion N6000 Series: N6195 , N6490 , N6100
- Hp Pavilion N5500 Series: N5584 , N5511L
- Hp Pavilion N5400 Series: N5495 , N5491 , N5490 , N5475 , N5474 , N5470 , N5455 , N5451 , N5450 , N5445 , N5441 , N5440 , N5435 , N5430 , N5425 , N5421L , N5420L , N5401 , N5415
- Hp Pavilion N5300 Series: N5390 , N5350 , N5340 , N5310
- Hp Pavilion N5200 Series: N5295 , N5290 , N5270 , N5250 , N5240 , N5210M , N5210
- Hp Pavilion N5100 Series: N5195 , N5190 , N5170 , N5150 , N5130 , N5125 , N5000
- Hp Pavilion N3400 Series: N3490 , N3478 , N3438 , N3410 , N3402
- Hp Pavilion N3300 Series: N3390 , N3370 , N3350 , N3330 , N3310

[Toshiba]

- Toshiba Satellite A130-ST1312
- Toshiba Portege M600
- Toshiba Dynabook AW2 series
- Toshiba Dynabook AX2 series
- Toshiba Satellite 1600 series
- Toshiba Satellite 1715XCDS series
- Toshiba Satellite 3000 series
- Toshiba Satellite A65 series
- Toshiba Satellite A70 series
- Toshiba Satellite A75 series
- Toshiba Satellite A80 series

- Toshiba Satellite P30 series
- Toshiba Satellite P35 series
- Toshiba Satellite Pro L100 series
- Toshiba Satellite Pro M50 series
- Toshiba Satellite Pro M70 series
- Toshiba Tecra A7 series
- Toshiba Equium A100-549
- Toshiba Equium L100-186
- Toshiba Equium M70 Series: M70-173, M70-337, M70-339, M70-364
- Toshiba Portege M600 Series: M601, M602, M603
- Toshiba Qosmio F45 Series: F45-AV410, F45-AV411, F45-AV412, F45-AV413, F45-AV423
- Toshiba Satellite 1100 Series: 1100, 1100 Z4, 1100-A210, 1135-S125, 1135-S1552
- Toshiba Satellite 1700 Series: 1710CDS, 1735, 1750
- Toshiba Satellite 1900 Series: 1900, 1900-SP303, 1905, 1905-S301, 1955-S801
- Toshiba Satellite 2435
- Toshiba Satellite A60-S156
- Toshiba Satellite A85-S107
- Toshiba Satellite A100 Series: A100-151, A100-163, A100-188, A100-209, A100-259, A100-295, A100-500, A100-507, A100-508, A100-521, A100-522, A100-523, A100-525, A100-533, A100-570, A100-649, A100-S2211TD, A100-S3211TD, A100-S8111TD, A100-ST3211
- Toshiba Satellite A105 Series: A105-S101, A105-S101X, A105-S171, A105-S171x, A105-S271, A105-S271X, A105-S361, A105-S361X, A105-S2236, A105-S2712, A105-S2713, A105-S2716, A105-S2717, A105-S3611
- Toshiba Satellite A110 Series: A110-101, A110-177, A110-178, A110-203, A110-260, A110-289, A110-339, A110-370
- Toshiba Satellite A135 Series: A135-S2326, A135-S2336, A135-S2346, A135-S2356, A135-S2376, A135-S2386, A135-S2426, A135-S4499, A135-S4517, A135-S4527, A135-S4656, A135-S4666, A135-S4677, A135-S4727, A135-S4827
- Toshiba Satellite A200 Series: A200-10W, A200-10X, A200-10Z, A200-11C, A200-12F, A200-13L, A200-13O, A200-13R, A200-13T, A200-13U, A200-14D, A200-14E, A200-180, A200-18T, A200-19I, A200-19K, A200-19M, A200-1A9, A200-1AA, A200-1AB, A200-1AE, A200-1Ai, A200-1BP, A200-1BW, A200-1CC, A200-1CR, A200-1DA, A200-1DN, A200-1DQ, A200-1FJ, A200-1G6, A200-1GD, A200-1HU, A200-1M7, A200-ST2041, A200-ST2043
- Toshiba Satellite A205 Series: A205-S4537, A205-S4557, A205-S4567, A205-S4577, A205-S4578, A205-S4587, A205-S4597, A205-S4607, A205-S4617, A205-S4618, A205-S4629, A205-S4638, A205-S4639, A205-S4707, A205-S4777, A205-S4787, A205-S4797
- Toshiba Satellite A215 Series: A215-S4697, A215-S4717, A215-S4737, A215-S4747, A215-S4757, A215-S4767, A215-S4807, A215-S4817
- Toshiba Satellite L10 Series: L10-100, L10-101, L10-104, L10-105, L10-130, L10-154, L10-190, L10-194, L10-226, L10-272, L10-SP104
- Toshiba Satellite L15-S104
- Toshiba Satellite L20 Series: L20-101, L20-112, L20-118, L20-120, L20-121, L20-135, L20-155, L20-157, L20-159, L20-173, L20-188, L20-205, L20-256, L20-S310TD, P205-S6237, L20-SP119, L20-SP131
- Toshiba Satellite L25 Series: L25, L25-S1216

- Toshiba Satellite L30 Series: L30, L30-10P, L30-114, L30-115, L30-11E, L30-11H, L30-134, L30-134, L30-140, L30-142
- Toshiba Satellite L35 Series: L35-S1054, L35-S2151, L35-S2161, L35-S2171, L35-S2174, L35-S2316, L35-S2366, L35-SP1011, L35-SP2011
- Toshiba Satellite L40 Series: L40-10O, L40-12X, L40-13G
- Toshiba Satellite L45 Series: L45-S2416, L45-S4687
- Toshiba Satellite L100 Series: L100-103, L100-104, L100-105, L100-140, L100-141, L100-165, L100-170, L100-171, L100-179
- Toshiba Satellite L400 Series: L401, L402
- Toshiba Satellite M30X Series: M30X-S114, M30X-S171ST, M30X-S214, M30X-S234, M30X-SP111
- Toshiba Satellite M35X Series: M35X-S149, M35X-S161, M35X-S171, M35X-S309, M35X-S311, M35X-S329, M35X-S349, M35X-S1491, M35X-S1611, M35X-S3091, M35X-S3111, M35X-S3291, M35X-S3491
- Toshiba Satellite M40-S312TD
- Toshiba Satellite M45 Series: M45-S165, M45-S1651, M45-S1691
- Toshiba Satellite M50 Series: M50-130, M50-157, M50-159, M50-161, M50-180, M50-215, M50-227, M50-228
- Toshiba Satellite M55 Series: M55-S1001, M55-S139, M55-S139X, M55-S141
- Toshiba Satellite M65 Series: M65-S821, M65-S8211
- Toshiba Satellite M70 Series: M70-144, M70-151, M70-152, M70-168, M70-169, M70-175, M70-181, M70-186, M70-187, M70-189, M70-194, M70-196, M70-212, M70-217, M70-236, M70-238, M70-239, M70-267, M70-343, M70-348, M70-356, M70-394, M70-395, M70-396
- Toshiba Satellite M200 Series: M200-ST200, M200-ST2002
- Toshiba Satellite M205 Series: M205-S3207, M205-S3217
- Toshiba Satellite P200 Series: P200-10C, P200-13Z, P200-140, P200-143, P200-144, P200-14O, P200-155, P200-156, P200-ST2061, P200-ST2071
- Toshiba Satellite P205 Series: P205-S6237, P205-S6247, P205-S6257, P205-S6267, P205-S6277, P205-S6287, P205-S6297, P205-S6298, P205-S6307, P205-S6327, P205-S6337, P205-S6347
- Toshiba Satellite U300 Series: U300, U300-10M, U300-111, U300-114, U300-115, U300-ST3091, U300-ST3094, U300-ST5107, U300-ST5127
- Toshiba Satellite U305 Series: U305-S5077, U305-S5087, U305-S5097, U305-S57402, U305-S7448, U305-S7467, U305-S7477, U305-S7449, U305-S7432, U305-S7446
- Toshiba Satellite Pro A100 Series: Pro A100-622, Pro A100-722, Pro A100-848, Pro A100-908, Pro A100-00K, Pro A100-00Y, Pro A100-01A, Pro A100-03R
- Toshiba Satellite Pro L10 Series: L10-113, L10-271
- Toshiba Satellite Pro L20 Series: L20-102, L20-103, L20-137, L20-211, L20-258, L20-259
- Toshiba Satellite Pro L40-135
- Toshiba Tecra L2 Series: L2-S011, L2-S022
- Toshiba Satellite 1000 Series
- Toshiba Satellite 1100 Series: 1100-S101, 1105, 1110-S153, 110CT, 1115-S103, 1115-S123
- Toshiba Satellite 1200 series
- Toshiba Satellite 1130 series
- Toshiba Satellite 1600 series
- Toshiba Satellite 1700 series
- Toshiba Satellite 1715XCDS series
- Toshiba Satellite 1900 Series: 1900-S305, 1900-0FS, 1900-101

- Toshiba Satellite 1905 Series: 1905-S277, 1905-S301, 1905-S302, 1905-S303, 1905-S304.
- Toshiba Satellite 1950, 1955 Series: Covers Satellite Models 1950, 1950-801, 1955-S801, 1955-S802, 1955-S803, 1955-S804, 1955-S805, 1955-S806, 1955-S807
- Toshiba Satellite 2430 Series: 2430-S255, 2430-S256
- Toshiba Satellite 2435-S256
- Toshiba Satellite 3000 series

[Acer]

- Acer TravelMate Series: 529, 527, 525, 524, 521, 520, 365
- Acer Extensa Series: 900, 690, 517, 516, 515, 514, 513, 512, 395, 394, 393, 392, 391, 390, 360
- Acer AcerNote Series: 382, 380, 370, 3680, 367
- Acer AcerNote Light Series: 374, 373, 372, 371, 370, 373

[Asus]

- Asus A6 Series: A6, A6JA, A6JC, A6Jm, A6K, A6KM, A6KT, A6M, A6T, A6Ta, A6Tc, A6R, A6VA, A6VM
- Asus A7 Series: A7C, A7D, A7F, A7G, A7J, A7Jc, A7M, A7S, A7Tc, A7V, A7Vc
- Asus A8 Series: A8F, A8Jc, A8Jp, A8Jr, A8Js, A8M, A8Sc
- Asus F2 Series: F2J, F2Je
- Asus F3 Series: F3Ja, F3Jc, F3Jm, F3Jp, F3Jr, F3M, F3P, F3Sc, F3T, F3Tc
- Asus F9 Series: F9F, F9J
- Asus G Series: G1, G1S, G2, G2S
- Asus M2 Series: M2000, M2000N
- Asus M6 Series: M6000N, M6700N, M6800N, M6B00N, M6N, M6V, M6VA
- Asus W3 Series: W3N
- Asus W5 Series: W5F, W5V
- Asus U5 Series: U5A, U5F
- Asus V1 Series: V1J, V1Jp
- Asus W2 Series: W2J, W2Pc, W2V

[Dell]

- Dell Inspiron 3000 series
- Dell Inspiron 3200 series
- Dell Inspiron 3500 series
- Dell Inspiron 7000 series
- Dell Latitude 110L series
- Dell Inspiron 1000 Series: 1000, 1200, 1300
- Dell Inspiron 2200 series
- Dell Inspiron B Series: B120, B130

[Hitachi]

- Hitachi Flora 270W
- Hitachi VisionBook Pro 7700 series

- Hitachi VisionBook Pro 7600 series
- Hitachi VisionBook Pro 7500 series
- Hitachi VisionBook Pro 7300 series
- Hitachi VisionBook Pro 7000 series
- Hitachi VisionBook Pro 6300 series
- Hitachi VisionBook Pro 6000 series
- Hitachi VisionBook Plus 5200 series
- Hitachi VisionBook Plus 5000 series
- Hitachi VisionBook Plus 4300 series
- Hitachi VisionBook Plus 4100 series
- Hitachi VisionBook Plus 4000 series
- Hitachi VisionBook Elite 8560
- Hitachi MX series
- Hitachi E series

[Lenovo/IBM]

- Lenovo 3000 G400
- Lenovo 3000 Y300 Series: 3000 Y300 7759
- Lenovo 3000 Y400 Series: 3000 Y400 9454, 3000 Y410a, 3000 Y410a 7757
- Lenovo 3000 Y500 Series: 3000 Y500 7761
- IBM Thinkpad i2611
- IBM Thinkpad T22
- IBM Thinkpad 2647
- IBM ThinkPad i1400 Series: i1400, i1442, i1460, i1480, i1482
- IBM ThinkPad i1500 Series: i1500, i1522
- IBM ThinkPad i1700 Series: i1700, i1720

[Twinhead]

- Twinhead SlimNote Series: P88TE, P88, VXE3, VXE, VX, 9166TZ, 9150TZ, 9133, 910CV, VXE3, VXE, VX, 9166TZ, 9150TZ, 9133, 910CV, 9100, 9, 890, 875, 8100, 6100, 600D, 575, 550S, 5100, 5, P88TE, P88

[Viewsonic]

- Viewsonic AirSync V Series: V210
- Viewsonic Airpanel V Series: V150P, V110P, V150, V110
- Viewsonic Tablet PC V Series: V1250S, V1250P, V1250

[Winbook]:

- Winbook W Series: W160, W140
- Winbook N series
- Winbook C Series: C170, C140, C120

[Fujitsu]:

- Fujitsu Siemens Amilo A Series: A1600, A1640, A1645, A1645G, A1650, A1650G, A1667, A1667G, A1840, A2200+, A6600, A6660, A7600, A7620, A7640, A7645, A8600, A8620, A8625
- Fujitsu Siemens Amilo L Series: L1300, L1300G, L1310G, L6810, L6820, L6825, L7300, L7310, L7320
- Fujitsu Siemens Amilo M Series: M1425, M7405
- Fujitsu Siemens Amilo Pro V1000
- Fujitsu Siemens Amilo Pro V2 Series: V2000, V2010, V2020, V2030, V2035, V2040, V2045, V2055, V2060, V2065, V2085
- Fujitsu Siemens Amilo Pro V3 Series: V3205, V3405, V3505, V3515, V3525, V3545
- Fujitsu Siemens Amilo Pro V7 Series: V7010
- Fujitsu Siemens Amilo Pro V8 Series: V8010, V8210
- Fujitsu Siemens Celcius H Series: H210, H230, H240
- Fujitsu Siemens Celcius Mobile Series: Mobile, Mobile 2, Mobile A, Mobile H, Mobile S
- Fujitsu Siemens LifeBook C1000 Series: C1010, C1020, C1110, C1110D, C1211, C1211D, C1212, C1212D, C1320, C1320D, C1321, C1410
- Fujitsu Siemens LifeBook C2000 Series: C2000, C2010, C2032, C2100, C2110, C2111, C2210, C2220, C2230, C2240, C2310, C2320, C2330, C2340
- Fujitsu Siemens LifeBook C6000 Series: C6632, C6659, C6661
- Fujitsu Siemens LifeBook E2000 Series E2000, E2010
- Fujitsu Siemens LifeBook E4000 Series: E4000D, E4010, E4010D
- Fujitsu Siemens LifeBook E6000 Series: E6180, E6624, E6634, E6644, E6646, E6654, E6664
- Fujitsu Siemens LifeBook E7000 Series: E7010, E7110
- Fujitsu Siemens LifeBook E8000 Series: E8010, E8020, E8020D, E8110
- Fujitsu Lifebook N Series: N3511, N3520, N3530, N6110, N6210, N6410, N6420
- Fujitsu Lifebook S Series: S2210, S6310, S6311, S6410, S7010, S7010D, S7020, S7020B, S7020D, S7020E, S7021, S7025, S7110, S7111
- Fujitsu Lifebook T Series: T4020A, T4020B, T4020D

ASUS CHARGER

Compatible with: (To find the right laptop Model by using" Ctrl+ F" and Search)

Part Number:

A000001200 / A000001210 / A000007020 / A000007030 / ACC10 / ADP-65DB / ADP-65HB / ADP-75FB-A /
ADT-W61 / API1AD43/ K000000550 / K000004120 / K000005050 / K000019570 / K000025320 / K000027270 /
K000029300 / K000032420 / K000032580/ K000040250 / K000040270 / K000040290 / K000040460 /
K000041670 / K000042840 / K000043680 / PA-1500-02 / PA-1600-01/ PA-1600-02 / PA-1650-01/ PA-1650-02 /
PA-1700-02 / PA-1750-01/ PA-1750-04 / PA3165U-1ACA/ PA3380E-1ACA/ PA3380U-1ACA / PA3396E-1ACA /
PA3396U-1ACA /PA3432E-1AC3 / PA3432E-1ACA/ PA3432U-1AC3 / PA3432U-1ACA / PA3467/ PA3467E /
PA3467E-1ACA / PA3467U /PA3467U-1ACA / PA3468E / PA3468E-1ACA / PA3468U / PA3468U-1ACA /
SADP-65KB/ SADP-65KBB / V000055210 / V000055400 / V000061300 / V000061310 / V000061690

Laptops:

Toshiba Satellite A100 Series:

A100-151 / A100-163 / A100-188 / A100-209 / A100-259 / A100-295 / A100-500 / A100-507 / A100-508 / A100-
521 / A100-522 / A100-523 / A100-525 / A100-533 / A100-570 / A100-649 / A100-S2211 / A100-S2211TD /
A100-S3211TD / A100-S8111 / A100-S8111TD / A100-SP2022 / A100-SP621 / A100-ST2311 / A100-ST3211

Toshiba Satellite A105 Series:

A105 / A105-S101 / A105-S1012 / A105-S1013 / A105-S1014 / A105-S101X / A105-S171 / A105-S1712 / A105-
S171x / A105-S2001 / A105-S2011 / A105-S2021 / A105-S2031 / A105-S2051 / A105-S2061 / A105-S2071 /
A105-S2081 / A105-S2091 / A105-S2101 / A105-S2111 / A105-S2121 / A105-S2131 / A105-S2141 / A105-
S2194 / A105-S2201 / A105-S2204 / A105-S2231 / A105-S2236 / A105-S271 / A105-S2712 / A105-S2713 /
A105-S2716 / A105-S2717 / A105-S2719 / A105-S271X / A105-S361 / A105-S3611 / A105-S361X / A105-
SP2012 / A105-SP461

Toshiba Satellite A110 Series:

A110-101 / A110-177 / A110-178 / A110-203 / A110-260 / A110-289 / A110-339 / A110-370

Toshiba Satellite A130 Series:

A130 / A130-ST1311 / A130-ST1313

Toshiba Satellite A135 Series:

A135 / A135-S2246 / A135-S2256 / A135-S2266 / A135-S2276 / A135-S2286 / A135-S2296 / A135-S2306 /
A135-S2326 / A135-S2346 / A135-S2356 / A135-S2376 / A135-S2386 / A135-S2396 / A135-S4407 / A135-
S4417 / A135-S4427 / A135-S4437 / A135-S4447 / A135-S4457 / A135-S4467 / A135-S4477 / A135-S4478 /
A135-S4487 / A135-S4488 / A135-S4499 / A135-S4517 / A135-S4527 / A135-S4656 / A135-S4677 / A135-
S4827 /A135-SP4016 / A135-SP4036 / A135-SP4048/A135-SP4058 / A135-SP4088 / A135-SP4108 / A135-
SP4156

Toshiba Satellite A200 Series:

A200-10W / A200-10X / A200-10Z / A200-11C / A200-12F / A200-13L / A200-13O / A200-13R / A200-13T /

A200-13U / A200-14D / A200-14E / A200-180 / A200-18T / A200-19I / A200-19K / A200-19M / A200-1A9 / A200-1AA / A200-1AB / A200-1AE / A200-1Ai / A200-1BP / A200-1BW / A200-1CC / A200-1CR / A200-1DA / A200-1DN /
A200-1DQ / A200-1FJ / A200-1G6 / A200-1GD / A200-1HU / A200-1M7 / A200-ST2041 / A200-ST2043

Toshiba Satellite A205 Series:

A205 / A205-S4537 / A205-S4557 / A205-S4567 / A205-S4577 / A205-S4578 / A205-S4587 / A205-S4597 /
A205-S4607 / A205-S4617 / A205-S4618 / A205-S4629 / A205-S4638 / A205-S4639 / A205-S4647 / A205-S4707 / A205-S4777 / A205-S4797 / A205-S7456 / A205-SP4038 / A205-SP4068

Toshiba Satellite A215 Series:

A215-S4697 / A215-S4717 / A215-S4737 / A215-S4747 / A215-S4757 / A215-S4767 / A215-S4807 / A215-S4817 / A215-S48171 / A215-S7407 / A215-S7408 / A215-S7414 / A215-S7418 / A215-S7421 / A215-S7422 /
A215-S7427 / A215-S7433 / A215-S7437 / A215-S7444 / A215-S7447 / A215-S7462 / A215-SP401

Toshiba Satellite A85 Series:

A80-S178 / A85-S107 / A85-S1071 / A85-S1072 / A85-SP107 / A85-SP1072

Toshiba Satellite L10 Series:

L10-100 / L10-101 / L10-104 / L10-105 / L10-130 / L10-154 / L10-190 / L10-194 / L10-226 / L10-272 / L10-SP104

Toshiba Satellite L15 Series:

L15 / L15-S104 / L15-S1041 / L15-SP104 / L15-SP1041

Toshiba Satellite L20 Series:

L20-101 / L20-112 / L20-118 / L20-120 / L20-121 / L20-135 / L20-155 / L20-157 / L20-159 / L20-173 / L20-188 /
L20-205 / L20-256 / L20-S310 / L20-S310TD / L20-SP119 / L20-SP131 / L20-SP131 / L20-SP231 / P205-S6237

Toshiba Satellite L25 Series:

L25 / L25-S119 / L25-S1192 / L25-S1193 / L25-S1194 / L25-S1195 / L25-S1196 / L25-S121 / L25-S1212 / L25-S1213 / L25-S1215 / L25-S1216 / L25-S1217 / L25-SP121 / L25-SP129 / L25-SP139 / L25-SP141 / L25-SP151

Toshiba Satellite L30 Series:

L30 / L30-10P / L30-114 / L30-115 / L30-11E / L30-11H / L30-134 / L30-140 / L30-142

Toshiba Satellite L35 Series:

L35 / L35-S1054 / L35-S2151 / L35-S2161 / L35-S2171 / L35-S2174 / L35-S2194 / L35-S2316 / L35-S2366 /
L35-SP1011 / L35-SP2011 / L35-SP2031 / L35-SP2041 / L35-SP2051 / L35-SP2071 / L35-SP4016 / L35-SP4068 / L35-SP4086 / L35-SP4096 / L35-SP4116

Toshiba Satellite L45 Series:

L45-S2416 / L45-S4687 / L45-S7409 / L45-S7419 / L45-S7423 / L45-S7424 / L45-SP2036 / L45-SP2046 / L45-SP2056 / L45-SP2066 / L45-SP4016

Toshiba Satellite M105 M115 Series:

M105-S1011 / M105-S1021 / M105-S1031 / M105-S1041 / M105-S10xx / M105-SP1011 / M105-SP1021 / M105-SP1031 / M105-SP1041 / M115-S1061 / M115-S1064 / M115-S1071 / M115-S1074

Toshiba Satellite M200 M205 Series:

M200-ST2002 / M205-S3207 / M205-S3217 / M205-S7452 / M205-S7453

Toshiba Satellite M30X Series:

M30X / M30X-1593 / M30X-214 / M30X-40 / M30X-60 / M30X-80 / M30X-S114 / M30X-S1592 / M30X-S1593 / M30X-S171 / M30X-S181 / M30X-S191 / M30X-S214 / M30X-S221 / M30X-s234 / M30X-SP111 / M30X-SP114

Toshiba Satellite M35X Series:

M35X / M35X-114 / M35X-149 / M35X-S109 / M35X-S111 / M35X-S114 / M35X-S1141 / M35X-S1142 / M35X-S1143 / M35X-S149 / M35X-S1491 / M35X-S1492 / M35X-S161 / M35X-S1611 / M35X-S163 / M35X-S1631 / M35X-S309 / M35X-S3091 / M35X-S311 / M35X-S3111 / M35X-S3112 / M35X-S329 / M35X-S3291 / M35X-S349 / M35X-S3491 / M35X-SP111 / M35X-SP114 / M35X-SP161 / M35X-SP171 / M35X-SP181 / M35X-SP311 / M35X-SP349

Toshiba Satellite M40 M45 Series:

M40-S312TD / M45-S165 / M45-S1651 / M45-S165X / M45-S169 / M45-S1691

Toshiba Satellite M55 Series:

M55-S1001 / M55-S139 / M55-S1391 / M55-S139X / M55-S141

Toshiba Satellite M60 M65 Series:

M60-S811 / M60-S8112 / M60-S9093 / M65-S809 / M65-S8091 / M65-S8092 / M65-S821 / M65-S8211 / M65-S9062 / M65-S9063 / M65-S9064 / M65-S9065 / M65-S909 / M65-S9091 / M65-S9092 / M65-SP811 / M65-SP959

Toshiba Satellite P205 Series:

P205D-S7429 / P205D-S7438 / P205D-S7439 / P205D-S7454 / P205-S6237 / P205-S6247 / P205-S6257 / P205-S6267 / P205-S6287 / P205-S6297 / P205-S6298 / P205-S6307 / P205-S6337 / P205-S6347 / P205-S6348 / P205-S7469 / P205-S7476

Toshiba Satellite U305 Series:

U305 / U305-S5077 / U305-S5087 / U305-S5097 / U305-S5107 / U305-S5117 / U305-S5127 / U305-S7432 / U305-S7446 / U305-S7448 / U305-S7467 / U305-S7477 / U305-SP5017 / U305-SP5028 / U305-SP5037

Toshiba Tecra L2 Series:

L2-S011 / L2-S022

Toshiba Satellite 1000 1100 1130 1200 Series:

1000-S157 / 1000-S158 / 1005-S157 / 1005-S158 / 1100-S101 / 1110-S153 / 1110-SP153 / 1115-S103 / 1115-S107 / 1115-S123 / 1115-SP153 / 1130-S155 / 1130-S156 / 1135-S125 / 1135-S155 / 1135-S1551 / 1135-S1552 / 1135-S1553 / 1135-S1554 / 1135-S156 / 1200-S121 / 1200-S122

Toshiba Satellite 1600 1700 Series:

1605CDS / 1625CDT / 1675CDS / 1695CDT / 1715XCDS / 1730-S101 / 1735-S101 / 1750-S202 / 1755-S202

Toshiba Satellite 3000 Series:

3000-S304 / 3000-S307 / 3000-S353 / 3005-S303 / 3005-S304 / 3005-S307 / 3005-S308 / 3005-S403